



Flexible Waste System CD-FW40

Installation & Maintenance Instructions

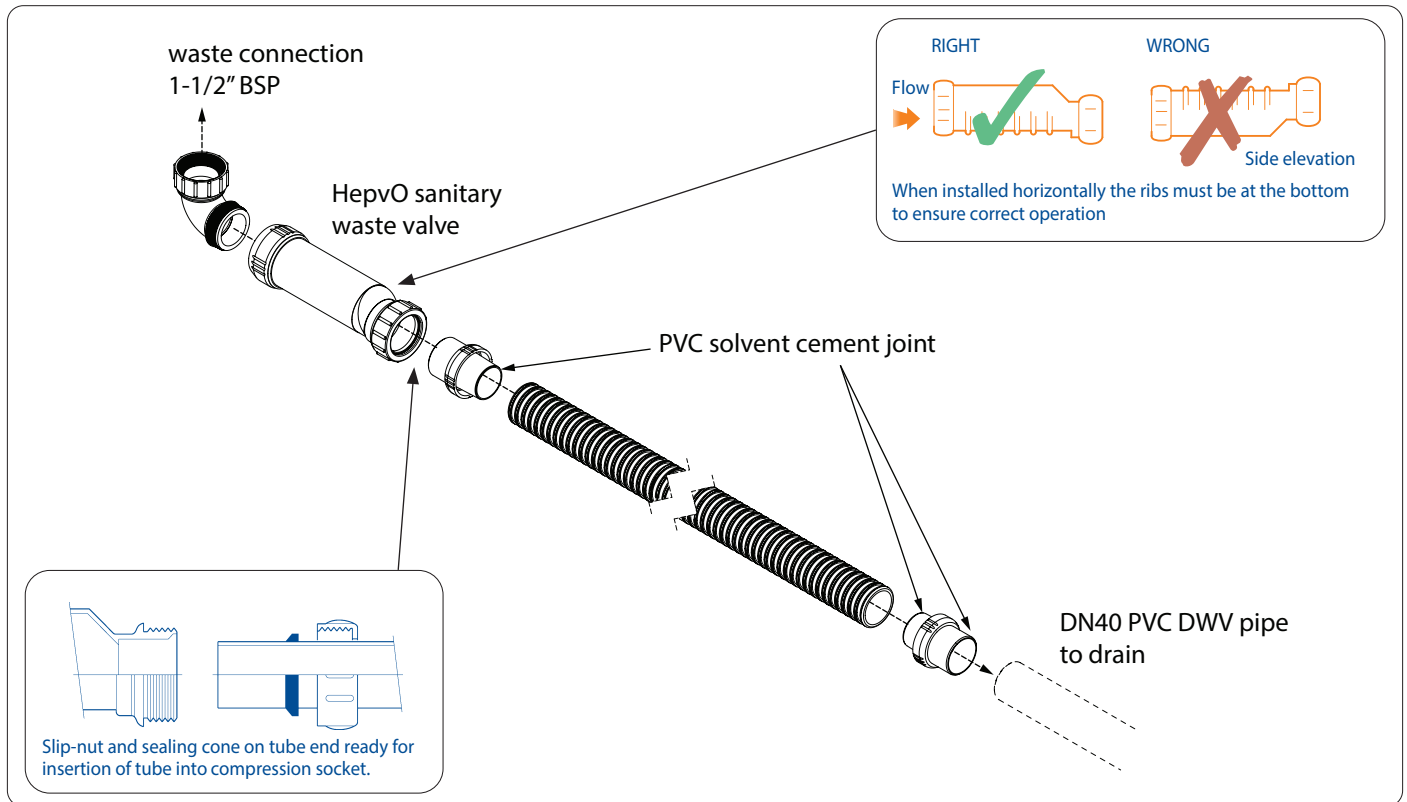

1. Connect elbow to HepvO valve. Note the orientation of HepvO valve, the ribs must face downward.
2. To connect spigot fitting to HepvO valve, first unscrew the HepvO slip-nut from the outlet/inlet adaptor and slide the slip-nut, slip washer and rubber seal onto the spigot. Insert the spigot fully into the socket. Slide the rubber seal, slip washer and screw slip-nut against the face of the socket, and tighten the slip-nut by hand, (check that the slip-nut is square to the body and does not 'cross-thread'), hand tight should be adequate to form a proper seal.
3. Flexible tube is suitable for solvent welding. Connect spigot fitting to flexible tube using suitable solvent cement for PVC DWV pipe joint. Ensure the spigot is fully inserted into flexible tube.
4. Cut the flexible tube to suitable length. Connect the other spigot fitting onto the other end of flexible tube using the solvent cement.
5. Glue the spigot onto connecting drain pipe (DN40 PVC DWV) using the solvent cement.
6. Fit elbow onto the outlet of basin or sink waste (1-1/2" BSP).

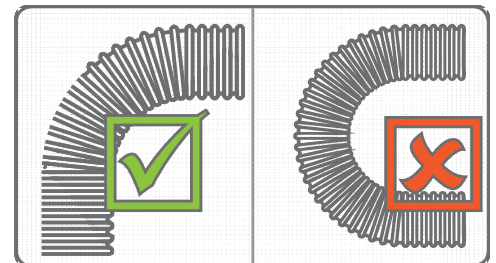

IMPORTANT NOTE:

Do not overstretch or bend flexible tube at a tight acute angle of less than 90 degrees.



Maintenance

If mechanical devices such as spiral cables, rippers or water jetters are required to clear blockages in the waste system, the HepvO valve must be removed first. It is good practice to rinse the HepvO valve with a little clean water before replacing it in the system.

I00454_Version 1.0__07Jul22

Flexible Waste System

CD-FW40

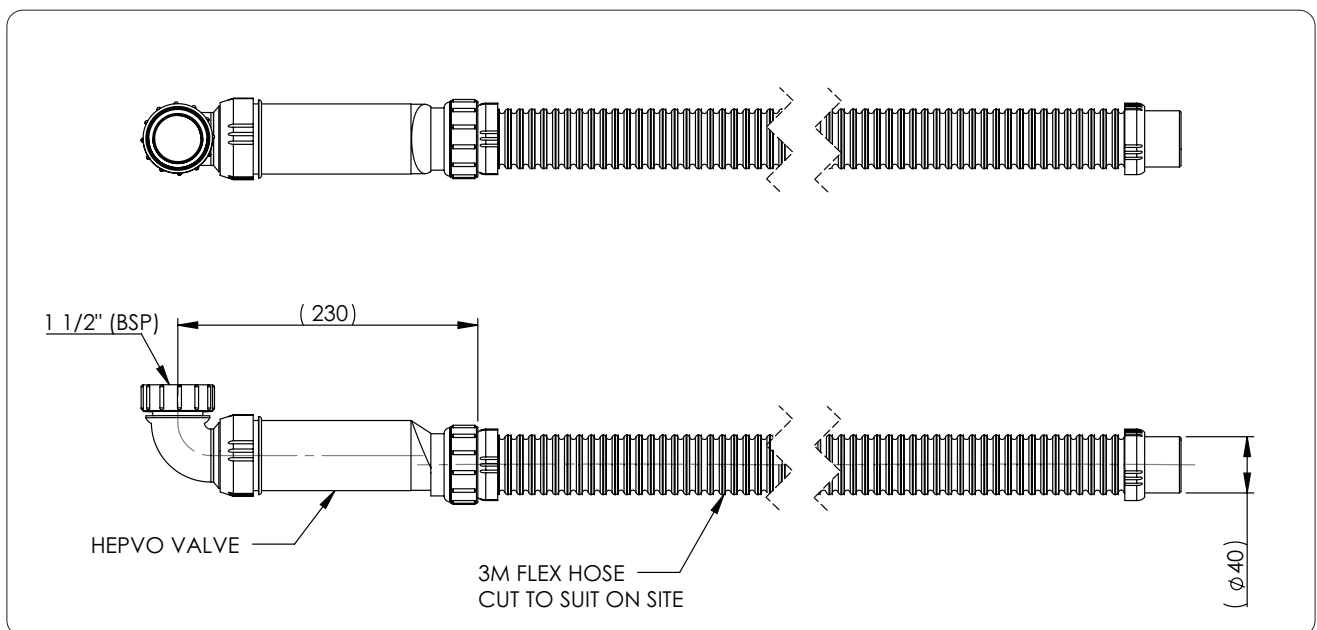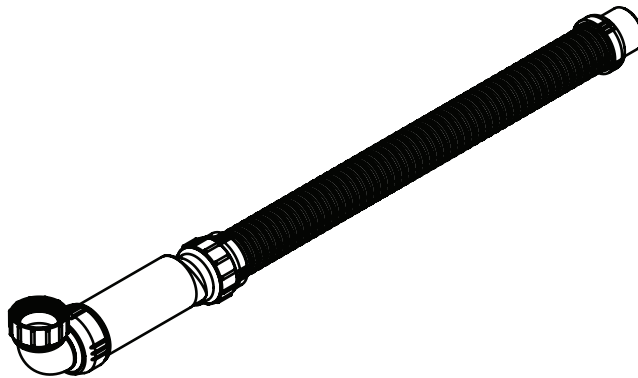

Enware products are to be installed in accordance with the Plumbing Code of Australia and AS/NZS3500. Reference should also be made to the Australasian Health facility Guidelines (AHFG), ABCB and Local Government regulations when considering the choice of, and the installation of these products.

Enware Australia advises:

1. Due to ongoing Research and Development, specifications may change without notice. 2. Component specifications may change on some export models. 3. Refer to warranty statement for warranty details - www.enware.com.au/warranty

I00454_Version 1.0__07Jul22