

The Custodian® Detachable Hand Shower with Hose

Installation and Maintenance Instructions

CNHNDSHHS-D




* Wall shower rose not included

specifications

- Suitable for use with high pressure water supply between 150 and 500 kPa.
- The flow of water to the shower is regulated.
This lower flow rate may not be suitable for use with some gravity-fed water heaters, low and unequal pressure supply networks, instantaneous water heaters, tempering valves, solar water heaters and thermostatic mixing valves.

dimensions

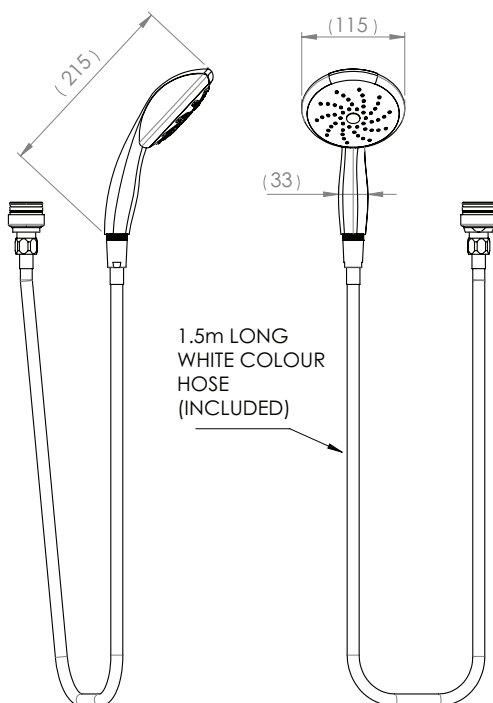

All measurements are in millimetres.

technical data

Working Pressure Range	Min 150 kPa Max 500 kPa
Flow Rate	8 L/min
Maximum Working Temperature	70°C

Enware products are to be installed in accordance with the Plumbing Code of Australia (PCA) and AS/NZS3500. Installations not complying with PCA and AS/NZS 3500 may void the product and performance warranty provisions.

Reference should also be made to the Australasian Health Facility Guidelines (AHFG), ABCB and Local Government regulations when considering the choice of, and the installation of these products.

This product must be installed and commissioned by a qualified plumber.

For use with potable water only.


NOTE: Enware Australia advises:

1. Due to ongoing Research and Development, specifications may change without notice.
2. Component specifications may change on some export models.
3. Refer to warranty statement for warranty details - www.enware.com.au/warranty.

components




assembly

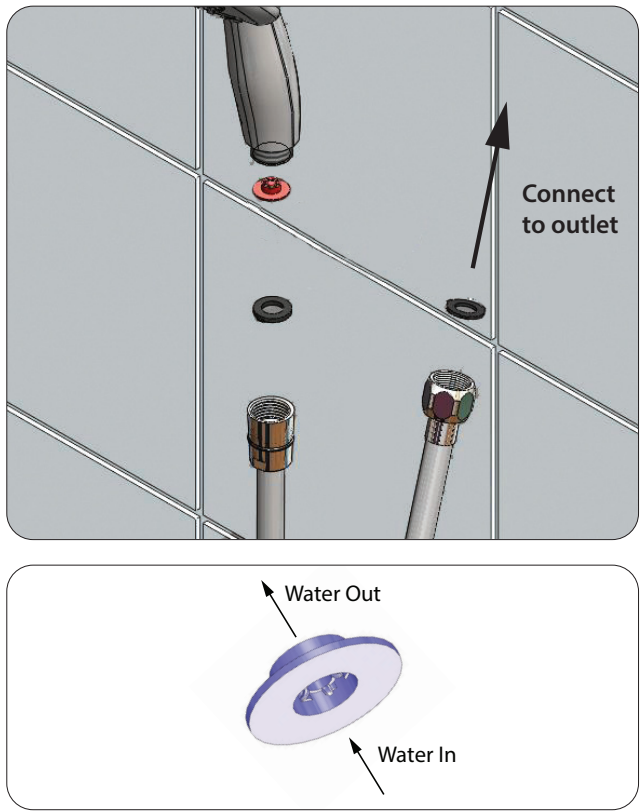


Note: To comply with WELS 3 Star rating, remove flow control in wall shower head.

operation


ATTACHING HAND SHOWER TO WALL SHOWER OUTLET

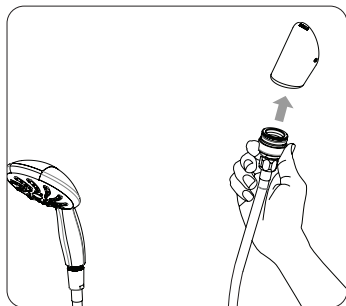

Push the end fitting of hand shower into Custodian® shower outlet on wall.

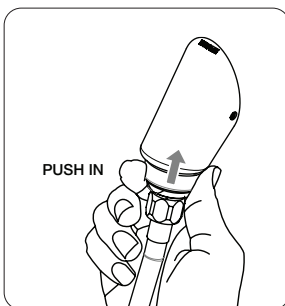


Push the fitting in firmly until it comes to a stop.

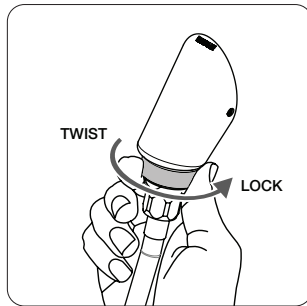


Twist the lock nut clockwise to lock the fitting in place.

REMOVING HAND SHOWER FROM WALL SHOWER OUTLET

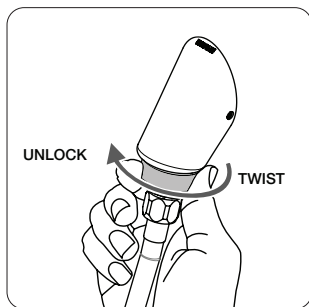

Twist the lock nut anti-clockwise to unlock hand shower fitting.

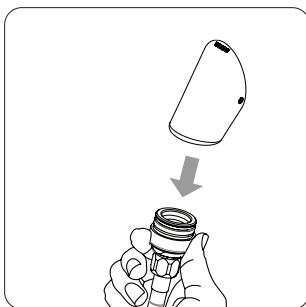

Holding the lock nut, pull the end fitting straight out.

maintenance

CLEANING

Enware products should be cleaned with a soft damp cloth using only mild liquid detergent or soap and water. Do not use cleaning agents containing a corrosive acid, scouring agent or solvent chemicals. Do not use cream cleaners, as they are abrasive. Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

troubleshooting

FAULT / SYMPTOM	CAUSE	RECTIFICATION
1. Poor water flow	Debris in line	Dismantle shower rose and clean / reverse rinse shower rose. Dismantle flow control and clean. Replace if necessary.



1300 369 273
info@enware.com.au
enware.com.au