# EMERGENCY CEILING MOUNTED HAND OPERATED DELUGE SHOWER

**Installation & Maintenance Instructions** 

EW1080



NOTE: THIS DOCUMENT IS TO BE LEFT ONSITE WITH FACILITY MANAGER AFTER INSTALLATION

### technical data



Inlet Connection	25 mm (1") BSP	
Water Supply Line Size	DN25mm (1") nominal size	
Working Pressure - to achieve Australian Standard ANSI Z358.1- 2004 compliance	210 kPa Caution should be taken when pressure exceeds 550 kPa (80 psi)	
Minimum Flow Requirements	75.7 lpm (20 US gpm)	
Minimum Working Pressure or for applications not requiring Australian Standard ANSI Z358.1- 2004	40 kPa (5.7 psi) [Safety showers are flow volume dependent and the line size needs to be hydraulically calculated.]	
Weight	3kg	
Dimensions	820 x 220 x 210mm	

Installation of eyewash equipment shall be in accordance with AS4775-2007 or ANSI Z358.1-2009 - whichever is applicable to the installation.

Enware Australia advises due to ongoing Research and Development, specifications may change without notice.

Component specifications may change on some export models.

## installation compliance

#### **SUPPLY LINES**

Installation procedures shall be in accordance with correct plumbing practices. Supply piping shall be adequately sized to meet flow requirements. If shut off valves are installed for maintenance purposes, provisions shall be made to prevent unauthorised shut off.

#### PLACEMENT OF EMERGENCY EQUIPMENT

Emergency eyewash and shower equipment shall be available for immediate use. It shall take no longer than 10 seconds for an individual to reach the nearest facility. Factors that influence the location of emergency facilities include workplace lighting, obstructions to the path of travel and the work environment.

It should be noted that some situations may warrant the placement of equipment significantly closer to the hazard. In these situations, such as exposure to highly corrosive chemicals, the proper distances should be selected based on the advice from appropriate consultants. For situations such as exposure to strong acids or alkalis, due consideration needs to be given to possible reaction between the flushing fluid and the chemical if the flushing fluid enters a bulk container of the chemical.


#### FLUSHING FLUID TEMPERATURE

Continuous and timely irrigation of affected tissues for the recommended irrigation period are the principal factors in providing first aid treatment. Providing flushing fluid at temperatures conducive to use for the recommended irrigation period is considered as an integral part of providing suitable facilities. Medical recommendations suggest a flushing fluid at tepid temperature be delivered to affected chemically-injured tissue.

Temperatures in excess of 38°C have proven to be harmful to the eyes and can enhance chemical interaction with the eyes and skin. During design and installation, the effects of exposure of pipe to sun, radiant heat or other heat sources should be considered, and suitable control measures should be introduced to avoid any risk of scalding. While cold flushing fluid temperature provide immediate cooling after chemical contact, prolonged exposure to cold fluids affects the ability to maintain adequate body temperature and can result in the premature cessation of first aid treatment.


Before emergency eyewash and shower equipment is selected, a risk assessment shall be carried out to determine the most appropriate delivery temperature for the application. Means to ensure a constant, suitable delivery temperature shall also be identified during selection, so that equipment can perform as desired once installed.

# dimensions

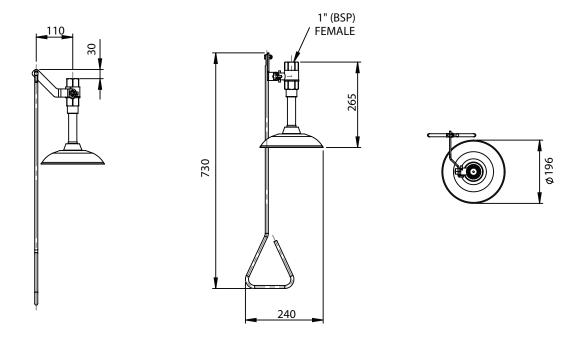

# components and spare parts

Description		Order Code
0	Shower Outlet Impeller Disc	792251
2	Screw CSK Phil Hd 3/16 BSW X1/2 S/S	672452
3	Valve Ball 1 Inch	ESP006
4	Handle to Suit 1" Ball Valve EW1080	793081
5	Setscrew 1/4 BSWX3/4 S/S	672459
6	Nut 1/4 BSW SS Nyloc	672329
7	Inspection Tag	ESS521
8	Ceiling Mount Shower Rose	790040
9	Pull Handle to Activate Shower	ESP008

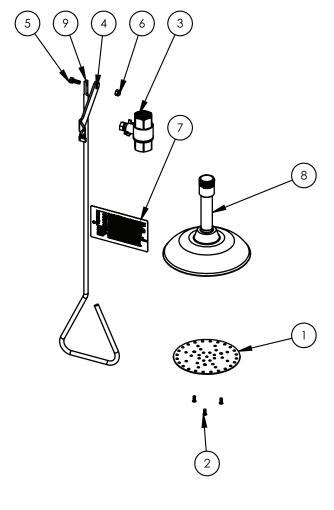

www.enware.com.au Call 1300 369 273


## installation procedure

#### **SHOWER HEIGHT**

Note the minimum height requirement for the shower outlet to conform to AS4775-2007 and ANSI Z358.1-2009, of 2083mm from the floor. Maximum height for the activation handle is 1733mm, which limits the maximum height for the shower rose to 2155mm. If the shower needs to be installed higher, a longer activation handle is required. (Contact Enware for more information.)

#### **INSTALLATION**

- 1. Apply sealing tape or Loctite 577 to threaded inlet connection on ceiling. Screw on shower arm and tighten to an aligned position with the handle in the correct orientation. Use the hex on the ball valve, do not use the shower rose to tighten the thread.
- 3. Attach the pull arm to the Upper Ball Valve using the nut already on the ball valve. The valve arm should point up at 45 degrees when in the off position.

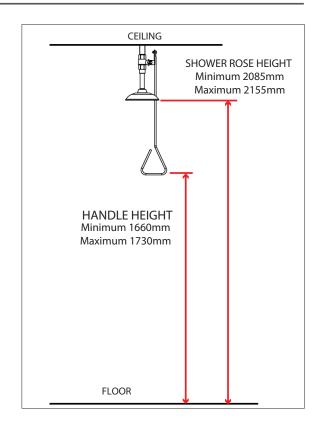


## operating and training instructions

Instructions for all emergency equipment shall be readily accessible to maintenance and training personnel. Employees who may be exposed to hazardous materials shall be instructed in the location and proper use of emergency shower equipment. Refer to AS4775-2007 or ANSI Z358.1 where applicable.

#### **SHOWER OPERATION**

Pulling down on the triangular pull handle activates the shower; this handle opens the 1" ball valve allowing water to flow through to showerhead.

To close the shower valve and stop flow, push the handle upwards.

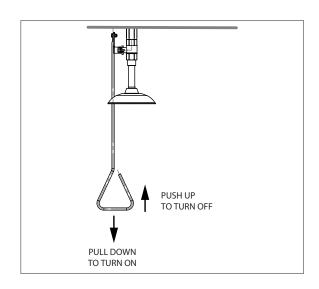

## maintenance

The shower should be activated every week for a period long enough to verify operation and ensure the flushing fluid is available. Note: the intent is to ensure that there is a flushing fluid supply at the head of the device and to clear the supply line of any sediment build up that could prevent fluid from being delivered to the head of the

device, and to minimise microbial contamination due to sitting water.

All shower units shall be inspected annually by a qualified technician to assure conformance with ANSI Z358.1-2009 or AS4775-2007, whichever is applicable to the installation.

Call 1300 369 273 www.enware.com.au

## AS4775 – 2007 Safety Equipment Minimum Performance Checklist

- Installation shall be in accordance with proper plumbing practices. Supply piping shall be adequately sized to meet flow requirements. (Sec D1)
- All plumbed emergency equipment shall be connected to a continuous source of flushing fluid supply which may be drinking water, preserved water, preserved buffered saline solution or other medically acceptable solution manufactured and labelled in accordance with applicable government regulations. (Sec 4.4, 4.10, 6.7 (c)), 7.5 (b), 8.5 (b), 9.5 (b), 11.3.3 (c))
- All equipment shall be constructed of corrosion– resistant materials (Sec 4.2, 5.1) Note: The Plumbing Code of Australia does not allow the use of galvanised pipes or fittings on drinking water supply lines. AS/ NZS3500.1 Sec 2.4.2(c)
- Safety equipment shall be accessible within 10 seconds of hazard. (Sec 6.6, 7.4, 8.4, 9.4)
- Safety equipment shall be located on the same level as the hazard and the path of travel shall be free of obstructions. (Sec 6.6, 7.4, 8.4, 9.4)
- Emergency equipment location shall be well illuminated and be identified by a highly visible sign complying with AS1319 visible throughout the area served by the equipment. (Sec 6.6, 7.4, 8.4, 9.4)
- Employees who may be exposed to hazardous materials shall be trained in the location and proper use of emergency equipment. (6.8, 7.6, 8.6, 9.6).
- Emergency equipment shall be activated weekly to verify operation (6.8, 7.6, 8.6, 9.6)
- Emergency equipment shall be inspected annually to ensure conformance with the requirements of AS4775. (Sec 6.8, 7.6, 8.6, 9.6)
- Combination unit components shall comply with the individual performance requirements of the shower, eye wash & eye/face wash while operating simultaneously & shall be positioned so components may be used simultaneously by the same user. (Sec 9.3, 9.5 (b), 9.5 (e) (iii))
- Drench hoses are considered supplemental equipment to provide immediate flushing to support plumbed and self-contained equipment but shall not replace them. (Sec 11.1)
- Drench hoses shall be simple to operate and shall go from closed to fully open in one second or less. The valve shall be corrosion resistant. (Sec 11.3.2)

- Showerhead shall be not less than 2083mm and not more than 2438mm from the surface on which the user stands. (Sec 6.5.1, 9.1 (b))
- Shower shall deliver a minimum of 75.7 l/min of flushing fluid at 210kPa, with the flushing fluid being substantially dispersed throughout the pattern which shall be of a minimum diameter of 508mm when measured at 1524mm above the surface on which the user stands. (Sec 6.2, 6.5, 9.1 (b), 9.3)
- The shower operating control valve shall remain open without the use of the operator's hands. The valve shall be simple to operate and shall go from closed to fully open in one second or less and not be located more than 1733mm from the surface on which the user stands. The valve shall be corrosion resistant. (Sec 6.3, 7.2, 8.2, 9)
- Eye wash equipment shall deliver flushing fluid to both eyes simultaneously at a flow rate not less than 1.5 l/min at 210kPa. The flushing fluid streams should rise to approximately equal heights and should cover the areas between the interior and exterior lines of the test gauge and when lowered not more than 38mm below the fluids peak. (Sec 7.1, 9.1 (c), 7.3.1)
- Eye / face wash equipment shall deliver flushing fluid to the eyes simultaneously at a flow rate not less than 11.4 l/min at 210kPa. The flushing fluid streams should rise to approximately equal heights and should cover the areas between the interior and exterior lines of the test gauge when lowered not more than 38mm below the fluids peak. (Sec 8.1, 8.3, 9.1 (d))
- The flushing fluid nozzles of eye and eye/face wash units shall be not less than 838mm and no greater than 1143mm from the surface on which the user stands, and 153mm from the wall or nearest obstruction. (Sec7.4, 8.4, 9.1 (c), 9.1 (d))
- The eye and eye/face wash operating control valve shall remain open without the use of the operator's hands.
   The valve shall be simple to operate and go from closed to fully open in one second or less. The valve shall be corrosion resistant. (Sec 7.2, 8.2, 9.1 (c), 9.1 (d))

www.enware.com.au Call 1300 369 273

## ANSI Z358.1 - 2009 Safety Equipment Minimum Performance

## RECOMMENDED TESTING FLOW PRESSURE IS 30 psi (+.5 psi -.0 psi)

- Safety equipment shall be accessible within 10 seconds of hazard. (Sec 4.5.2, 5.4.2, 6.4.2, 7.4.2)
- Safety equipment shall be located on the same level as the hazard and the path of travel shall be free of obstructions. (Sec 4.5.2, 5.4.2, 6.4.2, 7.4.2)
- All employees subject to exposure to hazardous material should be instructed in the location and proper use of emergency equipment. (Sec 4.6.4, 5.5.4, 6.5.4, 7.5.4)
- Emergency equipment shall be activated weekly. (Sec. 4.6.2, 5.5.2, 6.5.2, 7.5.2) All shower units shall be inspected annually to assure conformance with ANSI Z358.1. (Sec. 4.6.5, 5.5.5, 6.5.5, 7.5.5)
- Combination unit components shall be capable of operating simultaneously and shall be positioned so that components may be used simultaneously by the same user. (Sec. 7.3, 7.4.4)
- All plumbed emergency equipment shall be connected to a continuous source of flushing fluid supply which may be drinking water, preserved water, preserved buffered saline solution or other medically acceptable solution manufactured and labelled in accordance with applicable government regulations.
- Drench hose must deliver a controlled flow of flushing fluid at a velocity low enough to be non-injurious. (Sec. 8.2.1)
- A drench hose can only be considered an eyewash eye/face wash if it meets performance requirements in Sec. 5 and/or 6.
- Delivery of tepid flushing fluid.\* (Sec. 4.5.6, 5.4.6, 6.4.6, 7.4.5). \*Suggested temperature range above 60°F (16°C) and below 100°F (38°C)
- Showerhead must be 82 to 96 inches (208.3cm 243.8cm) above surface floor of user (Sec. 4.1.3, 7.1)
- Shower must deliver minimum of 20 gallons (75.7L) per minute and provide a column of water 20 inches (50.5cm) wide at 60 inches (152.4cm)
- Valve shall be designed so that the flushing flow remains on without the use of the operator's hands. The valve shall be simple to operate and go from "off" to "on" in one second or less and actuator can not be more than 69 inches (173.3cm) from surface floor of user. (Sec. 4.2, 7.1)

- Emergency equipment location shall be well lit and identified with a highly visible sign. (Sec. 4.5.3, 5.4.3, 6.4.3, 7.4.3)
- Must provide a means of controlled flow to both eyes simultaneously at a velocity low enough to be non-injurious. (Sec. 5.1.1, 6.1.1, 7.1)
- Eye/face wash equipment must deliver minimum of 3 gallons (11.4L) per minute of water for 15 minutes. (Sec. 6.1.6, 7.1) Eyewash only must deliver minimum of 0.4 gallon (1.5L) per minute for 15 minutes. (Sec. 5.1.6, 7.1)
- The flushing fluid of an eyewash eye/face wash shall cover the areas between the interior and exterior lines of a gauge at some point less than 8 inches (20.3cm) above the eyewash nozzle. (Sec. 5.1.8, 6.1.8, 7.1)
- Outlets shall be protected from airborne contaminants. (Sec. 5.1.3, 6.1.3, 7.1)
- Flushing fluid nozzles should be 33 to 45 inches (83.8cm 114.3cm) from floor and minimum of 6 inches (15.3cm) from wall. (Sec. 5.4.4, 6.4.4, 7.1)
- Valve shall be designed so that the flushing flow remains on without the use of the operator's hands. The valve shall be simple to operate and go from "off" to "on" in one second or less. (Sec. 5.2, 6.2, 7.2)

Call 1300 369 273 www.enware.com.au

Enware Australia ("we" or "us") warrants that this product (also referred to as "our goods") will be free from all defects in materials and workmanship for 24 months\* from the date of purchase. Our liability under this warranty is limited at our option to the repair or replacement of the defective product or part, the cost of repair of the defective product or part or the supply of an equivalent product or part, in each case if we are satisfied the loss or damage was due to a defect in the materials or workmanship of the product or part. All products must be installed in accordance with the manufacturer's instructions, the PCA, and AS/NZS3500 including any other applicable regulatory requirements.

## making a claim

To make a claim under this warranty you must notify us in writing or via the online Online Product Service and Warranty Form\* within 7 days of any alleged defect in the product coming to your attention. Proof of purchase of the product must also be supplied. All notifications and accompanying information must be sent marked for the attention of the Enware Australia, 9 Endeavour Road, Caringbah NSW 2229.

We can also be contacted by telephone on 1300 369 273 (AUS) or +61 2 8536 4000 or by email to info@enware. com.au.

Your costs in making a claim under this warranty, including all freight, collection and delivery costs, are to be borne and paid by you. We also reserve the right at our cost to inspect any alleged defect in the product wherever it is located or installed or on our premises.

\* www.enware.com.au/product-service-enquiry

## exceptions

This warranty does not apply in respect of any damage or loss due to or arising from:

- a) Failure by you or any other person to follow any instructions for use (including instructions and directions relating to the handling, storage, installation, fitting, connection, adjustment or repair of the product) published or provided by us;
- b) Failure by you or any other person responsible for the fitting, installation or other work on the product to follow or conform to applicable laws, standards and codes (including the AS/NZ 3500 set of Standards, all applicable State and Territory Plumbing Codes, the Plumbing Code of Australia and directions and requirements of local and other statutory authorities); or
- c) Any act or circumstance beyond our control including faulty installation or connection, accident, abnormal use, acts of God, damage to buildings, other structures or infrastructure and loss or damage during product transit or transportation.

## other conditions

Except as provided or referred to in this document, we accept no other or further liability for any damages or loss (including indirect, consequential or economic loss) and whether arising in contract, tort or otherwise. Any benefits available to you under this warranty are in addition to any non-excludable rights or remedies you may have under applicable legislation, including as a "consumer" under the Australian Consumer Law. To that extent you need to be aware that: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

www.enware.com.au Call 1300 369 273



ADDRESS: 9 Endeavour Road, Caringbah NSW 2229 Australia

POSTAL ADDRESS: P.O. Box 2545, Taren Point NSW 2229 Australia

PHONE: 61 2 8536 4000

1300 369 273 (AUS) WWW.ENWARE.COM.AU INFO@ENWARE.COM.AU

