
## 80mm Lever Handle (Jumper Valve)


## **Installation Instructions**

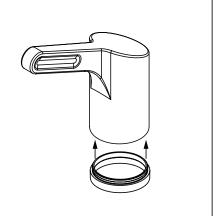



Fit colour indicator ring onto lever handle. To do this, place an indicator ring on flat surface with the rebated edge facing up. Press the lever handle down onto the indicator ring evenly until it clips into place.


If an indicator ring needs to be removed, place lever handle on a flat surface and apply pressure to the side of the indicator ring, until the ring pops off.



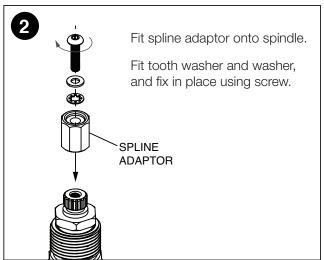


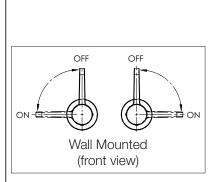


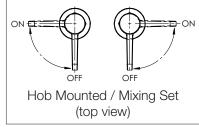

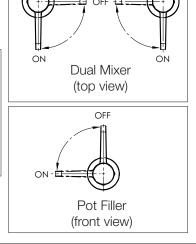

PAGE 1

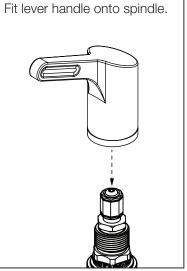

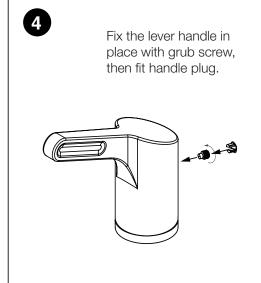

100561\_22 Aug 2023

3

Note the orientation of the tap handle.



If the lever handles do not line up straight:

- a. Change the position the spline adaptor on the SBA spindle in step 2.
- b. Adjust position of SBA spindle by slightly tightening or loosening it, using a spanner on the hex of the SBA spindle.

Note: Do not adjust position of SBA using handle. Do not over-tighten SBA spindle. (Max. torque 30Nm.)

Fit handle parts back on.

c. If lever handles do not line up parallel in the straight position, it is recommended to offset them away from the centre.



