




Installation

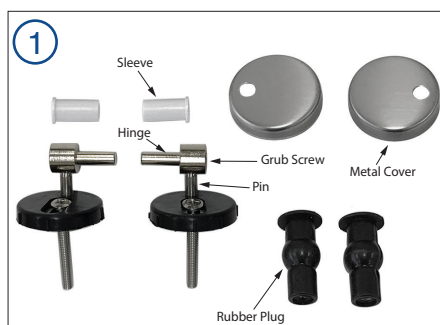

Loosen grub screw and take off hinge from pin. Fit metal cover through the pin, then fit the hinge back onto the pin, then tighten grub screw. Repeat for other hinge.
Fit rubber plugs into holes on the pan.
Rotate the metal covers out of the way to fit screws through the base of fittings as shown.

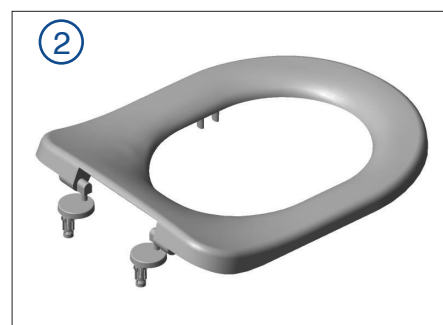

Ensure the plastic sleeves are fitted onto the seat, then fit the assembled hinges onto the seat.

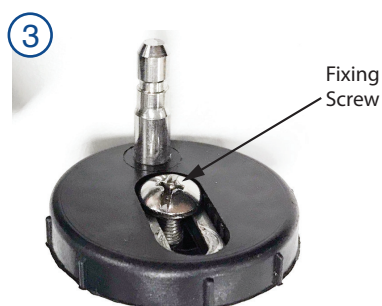

Fit the seat onto pan by fitting the fixing screws onto the rubber plugs.
Tighten the fixing screws lightly so that the base of the fitting can still be rotated around.




Adjust seat position so it aligns with the pan.
Loosen fixing screws if needed.



To adjust the position of buffers, pop the cover off the buffer then loosen the screw. Slide the buffer to desired position, then tighten screw to lock the buffer into position.



The buffers should be positioned so that the prongs sit just inside the rim of the pan.

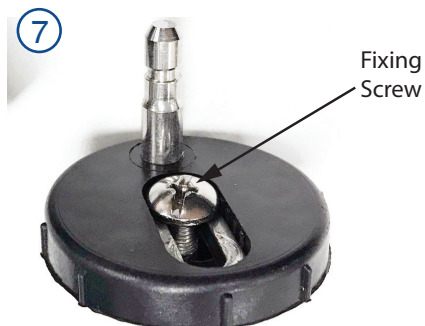

Once the seat is positioned correctly, further tighten the fixing screw with a screw driver, to lock the hinge in place.



Fit metal covers onto fittings by pushing down.