

EMFS300 Urinal Electronic Piezo Touch Button Program

Enware Programmable Urinal Piezo Button is a touch-activated electronic switch that can be easily set to a desired timing. Its versatility allows it to be set to a different program on site should there be a change of mind.

PIEZO TOUCH BUTTON PROGRAM FEATURES

Flush Volume Setting (WELS Star Rating)


Set the valve activation time to achieve required flush volume.

- WELS 5 Star / 4 Star / 3 Star (factory default) / 2 Star

Sentinel Flushing

Automatically activates the valve every 12 or 24 hrs and runs for the set valve time setting.

- Off (factory default) / 12 hr / 24 hr

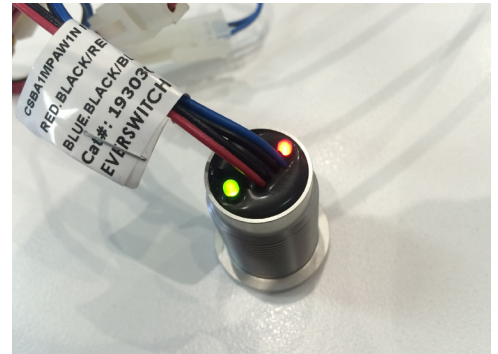

EMFS300 Urinal Electronic Piezo Touch Button Program

PROGRAM SETTING PROCEDURE

1. To set the button to a new program, firstly turn the power OFF to the button. This can be done by either turning the power OFF at the power point, or disconnecting the power connection close to the button.
2. You will need to be able to see the two LED's located at the back of the piezo button, so the front facia panel will need to be taken off the wall to access them.
3. Connect or turn ON the power to the switch. As soon as the power is on, a 3-second programming window opens. If the switch is not pressed in this time frame, both RED and GREEN LED's will flash alternately, and the switch returns to the last program it was set to.
4. Press the switch ONCE within the 3-second programming window. Light will flash long once indicating you are in Program 1.
5. [Step 1] Without delay, press the switch the required number of times to select the program number (see table). Press the switch slowly but firmly at 1-second intervals. (e.g. 4 presses to select program 4). The LED blinks every time the switch is pressed. Valid programs are 1 to 4.
6. [Step 2] Stop pressing and allow the piezo to flash twice long. You are now in Program 2.
Press the button the appropriate number of times (see table) for the required sentinel flush. **Button needs to be pressed at least once, even if sentinel flush is not required.**
7. Stop pressing to allow the piezo to flash three times long. The button is now set.

Touch	Program 1 WELS Star Flush Volume Setting		Step 2 Sentinel Flush
	WELS Star	Timing	
x 1	5 Star	1.6 sec	Off (standard setting)
x 2	4 Star	2.4 sec	Will flush once every 12 hr
x 3	3 Star (standard setting)	3.3 sec	Will flush once every 24 hr
x 4	2 Star	4.2 sec	