


Eyewash Tester

KEY FEATURES

- Test gauge checks for correct eye wash fluid stream pattern for eye wash
- Material: Clear Acrylic

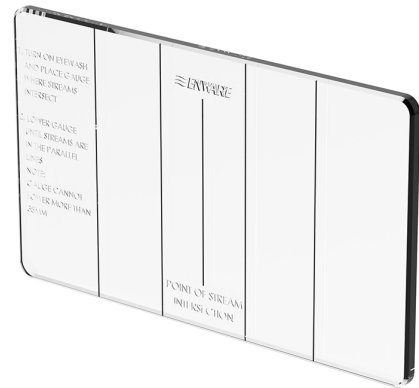


PRODUCT CODE



EST101

Eyewash Tester

TECHNICAL DATA

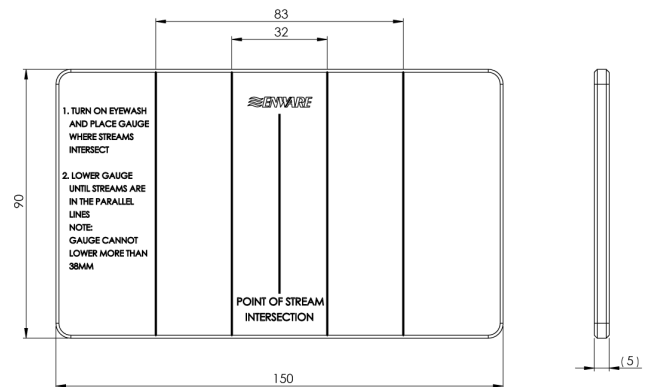

Eyewash Tester

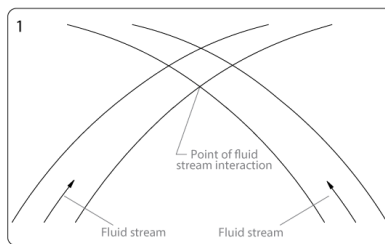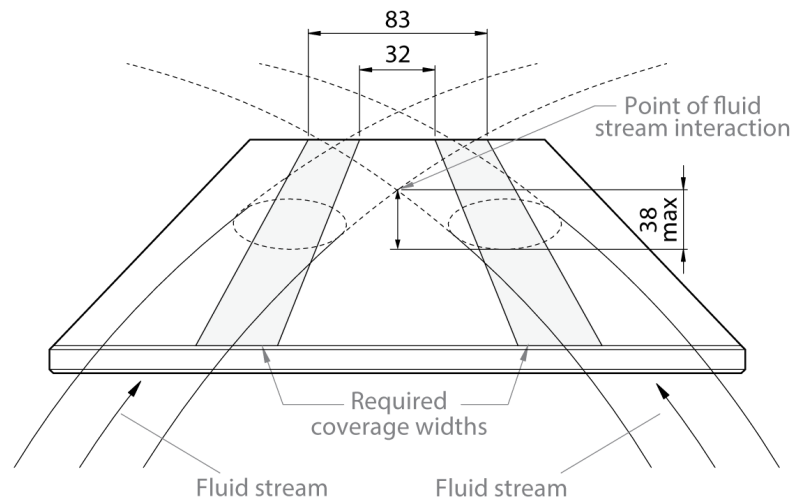

- How to test for correct eye wash flow pattern:
1. Turn on eye wash. Determine the peak of the water flow stream pattern or the point where the two water streams intersect.
 2. Place the gauge on top of the stream of the eyewash at the peak / intersecting position.
 3. Lower the gauge (by no more than 38mm) so that the flushing fluid covers the areas between the interior and exterior lines of the gauge (the position of user's eyes).

